


Installation Instructions


DAMEA W.C

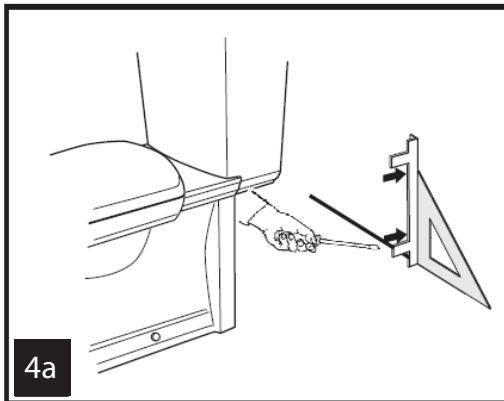

4a

Fix the bracket to the wall


4b

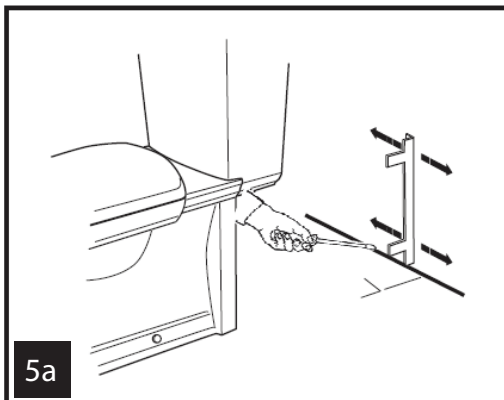

5a

The wall brackets can be slacked off to provide any minor adjustments

5b

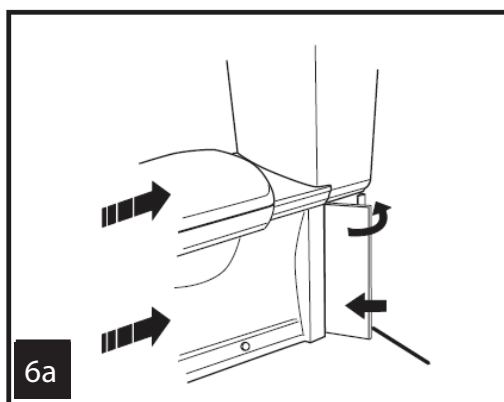

6a

Move the w.c back to the position marked previously.

Insert and pivot the infill panel to locate the magnets onto the wall bracket.

6b

Silverdale Bathrooms

Silverdale Road, Newcastle Under Lyme, Staffordshire, ST5 6EL.
Telephone: 01782 717175 Facsimile: 01782 717166
Email: sales@silverdalebathrooms.co.uk
www.silverdalebathrooms.co.uk

Tel: 01782 717175
Email: sales@silverdalebathrooms.co.uk
Web: www.silverdalebathrooms.co.uk