
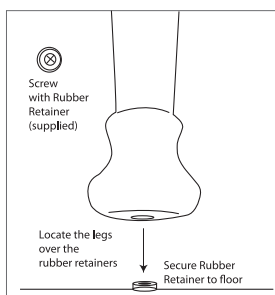


Ceramic Leg Set

INSTALLATION INSTRUCTIONS

In order to ensure a secure location and to prevent accidental movement of this leg set, please locate using the enclosed rubber retainer as follows:

1. Turn the console basin onto its back edge (Fig.1)
2. Measure the distance between the centre point of the leg set recess to the rear wall
3. Identify the mounting position of the console and measure and locate the two wall fixing bolts supplied
4. Secure the two rubber retainers to the floor using the screws supplied (Fig.2) so that they are located at the measurement taken in Step 2 above
5. Mount the basin to the wall bolts and locate the legs over the rubber retainers and inside the leg recesses. (Fig.2)

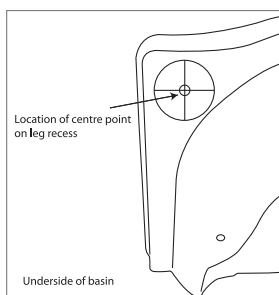

Silverdale Bathrooms

Silverdale Road, Newcastle Under Lyme, Staffordshire, ST5 6EL.
Telephone: 01782 717175 Facsimile: 01782 717166
Email: sales@silverdalebathrooms.co.uk
www.silverdalebathrooms.co.uk

Tel:
Facsimile:
Email:
Web:

01782 717175
01782 717166
sales@silverdalebathrooms.co.uk
www.silverdalebathrooms.co.uk